

Download How To Use Whirlpool Dishwasher Manual

Dishwasher Use Prepare and Load the Dishwasher IMPORTANT: Remove leftover food, bones, toothpicks and other hard items from the dishes. Remove labels from containers before washing. Make sure that when the dishwasher door is closed no items are blocking the detergent dispenser. Items should be loaded with soiled surfaces facing down andDishwasher Use STEP 1 Prepare and Load the Dishwasher IMPORTANT: Remove leftover food, bones, toothpicks, and other hard items from the dishes. Remove labels from containers before washing. Upper Rack Lower Rack Make sure nothing keeps spray arm(s) from spinning freely. It is important for the water spray to reach all soiled surfaces. Page 5 1. Remove the lower rack. 2. Unscrew the cap by turning it counter-clockwise. 3. When first using the dishwasher: fill the salt container to the rim with water. 4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. Page 4: Cycle Table. To add rinse aid, turn the Select a Cycle (cycles vary by model) RINSE AID dispenser cap ¼ turn to the left IMPROVES DRYING Full and lift off. Pour rinse aid into the Lock Efficient dishwashers run longer to save water and energy, just as opening until indicator level is at driving a car slower saves on gas.